FRIPP ISLAND PUBLIC SERVICE DISTRICT

PROCEDURES FOR TRUCKS WEIGHING MORE THAN 27 TONS CROSSING THE FRIPP ISLAND BRIDGE

Based on the recommendation of the Fripp Island Public Service District's independent bridge engineers, the following procedures have been created for handling trucks over 27 tons that wish to use the Fripp Island bridge.

Before coming on the island, all trucks over 27 tons must be weighed. This must include total weight plus split weights both front and back. No split weight may exceed 20 tons regardless of length. These weights and the distance between axles must be phoned/faxed into the FIPSD office for approval to cross the bridge. FIPSD will determine the maximum load the truck may carry with every effort made to equalize the weight distribution. Charts in one-ton increments will be utilized for loads from 28 to 39 tons. Loads of 40 tons must be equally balanced with 20 tons in front and 20 tons in back. All charts, including a chart showing where to measure load points, are attached to this document.

Excessive vehicle loads may require shutting down all other bridge traffic to allow passage. Based on the charts mentioned above, if a load falls into the area where the bridge must be shut down, then the following procedure will apply. The driver must get permission from the FIPSD to pass over the bridge after the truck is weighed and its weight distribution is determined. The truck driver must have a cell phone and call Fripp Island Security when he is at the Hunting Island end of the bridge. Security will send someone across the bridge to check the weight tickets and then stop traffic going off the island and tell the truck driver to proceed. Copies of the weight tickets for all loads over 27 tons will be dropped off at the PSD office.

Loads over 27 tons going off the island that require the bridge to be shut down will have to coordinate with PSD and Security ahead of time so they may arrange to shut off traffic on the North end of the bridge. Due to their short wheelbase, the limit on cement trucks will remain at 27 tons.


Carolina Storage (10 Neil Rd, Beaufort, 843-524-5800) has a 70ft load cell scale and can provide certified weight tickets for a minimal fee. Pilot Travel Center at Exit 5 on Hwy. 95 is able to provide both total and split weight tickets. Truckers must show these weight tickets with dates and descriptions to Security and provide copies to the PSD office. Other certified scales may also be used.

Any loads that do not meet these requirements will be dealt with on an individual basis. Truckers who violate this policy may be fined an appropriate amount.

Fripp Island Public Service District 291 Tarpon Blvd., Fripp Island, SC 29920 Telephone # 843-838-2400 / Fax # 843-838-4900


Fripp Island Security—Telephone # 843-838-2334, Fax # 843-838-2101



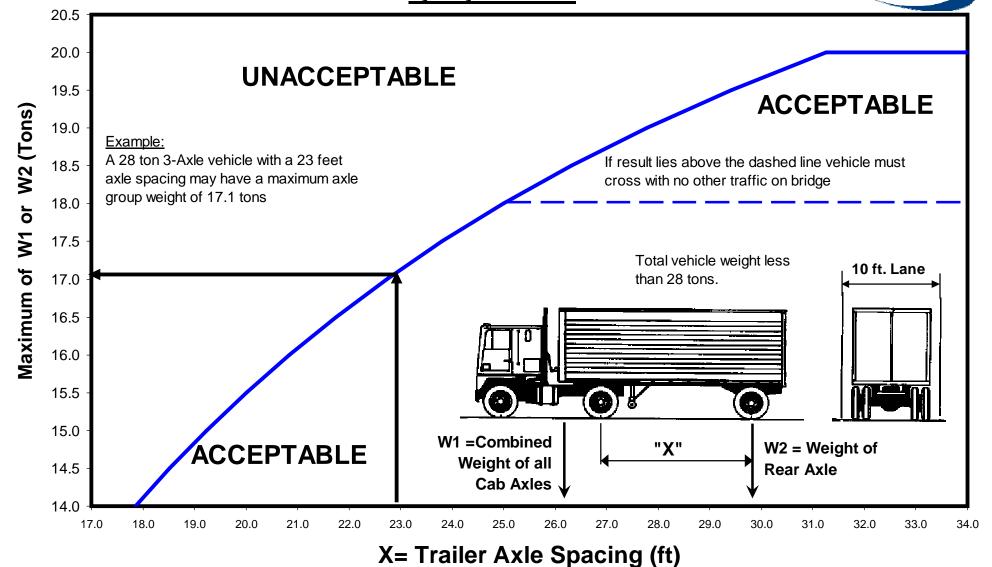


ENGINEERS
PLANNERS
ECONOMISTS
Wilbur Smith Associates

29 Ton Vehicle Weight - 3 Axle By: Taylor 11/10/04

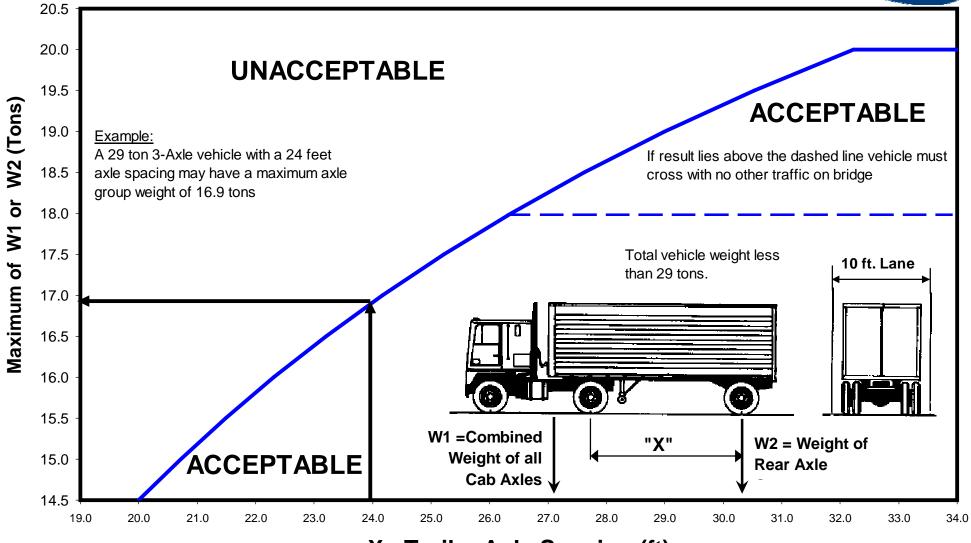


ENGINEERS
PLANNERS
ECONOMISTS
Wilbur Smith Associates

30 Ton Vehicle Weight - 3 Axle By: Taylor 11/10/04

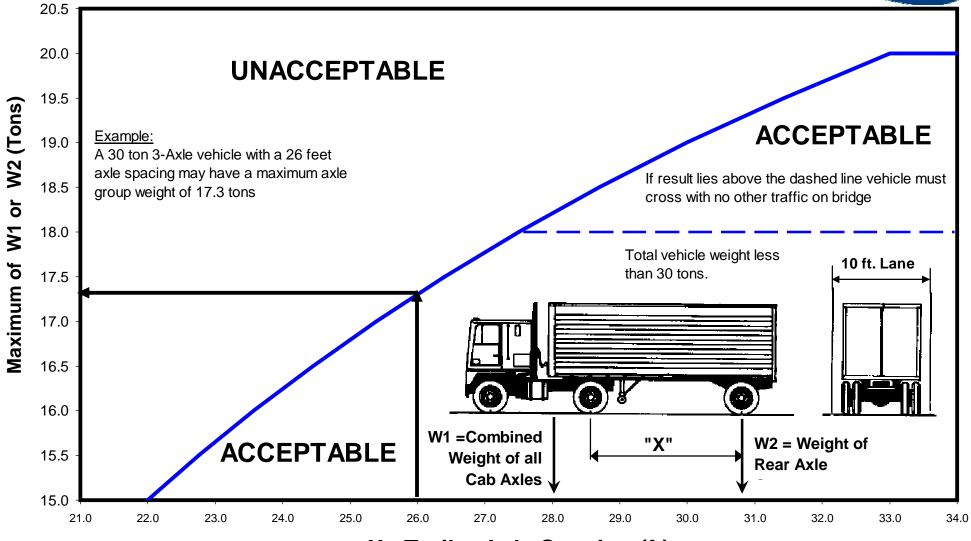


31 Ton Vehicle Weight - 3 Axle By: Taylor 11/10/04




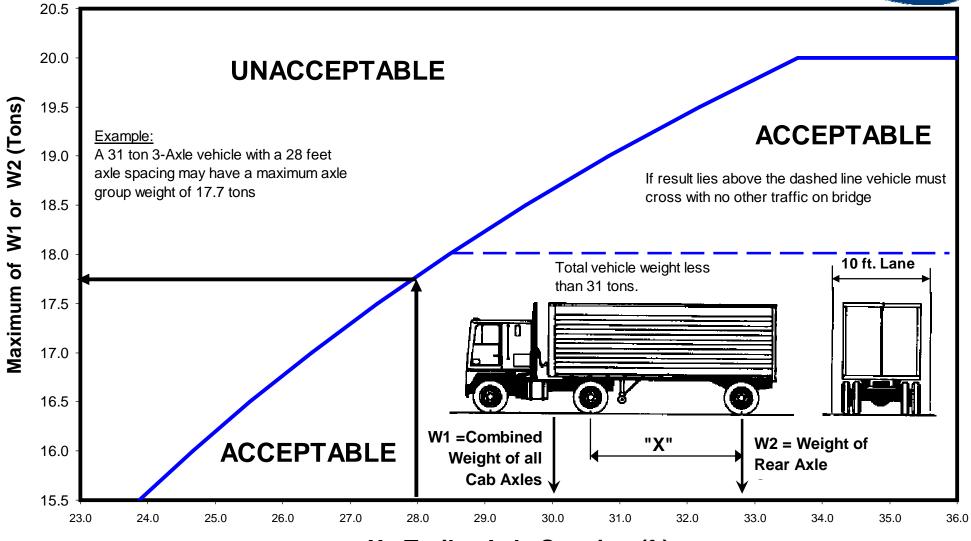




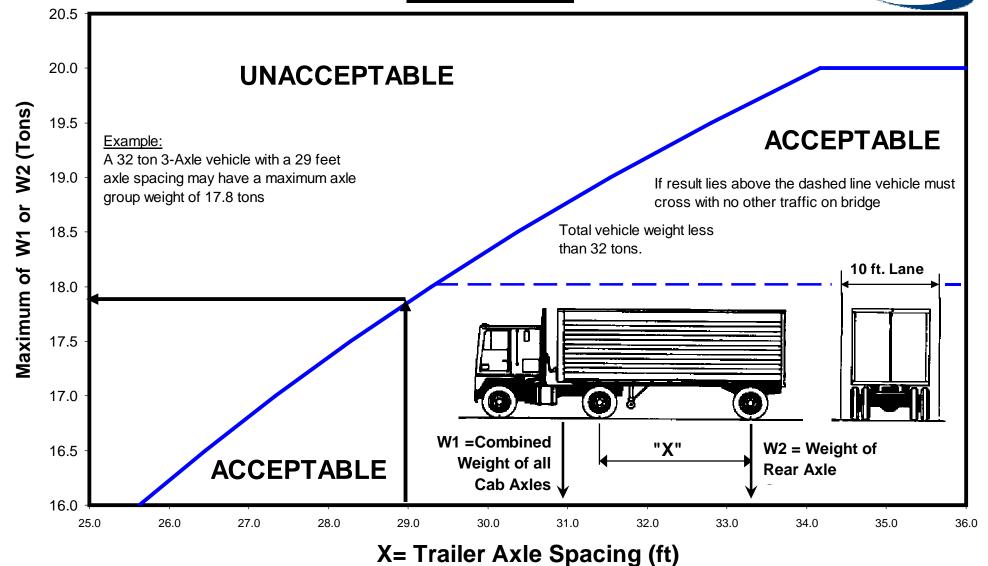


ENGINEERS
PLANNERS
ECONOMISTS
Wilbur Smith Associates

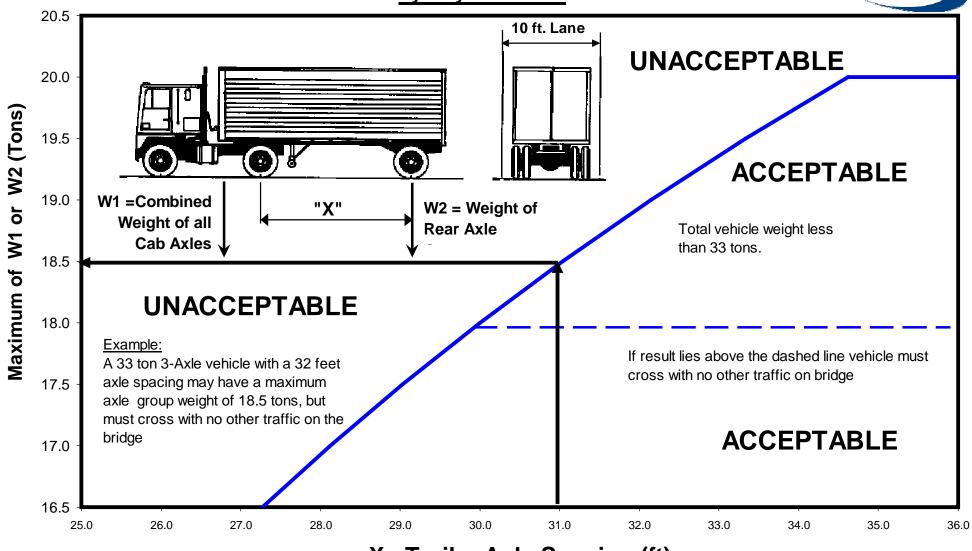



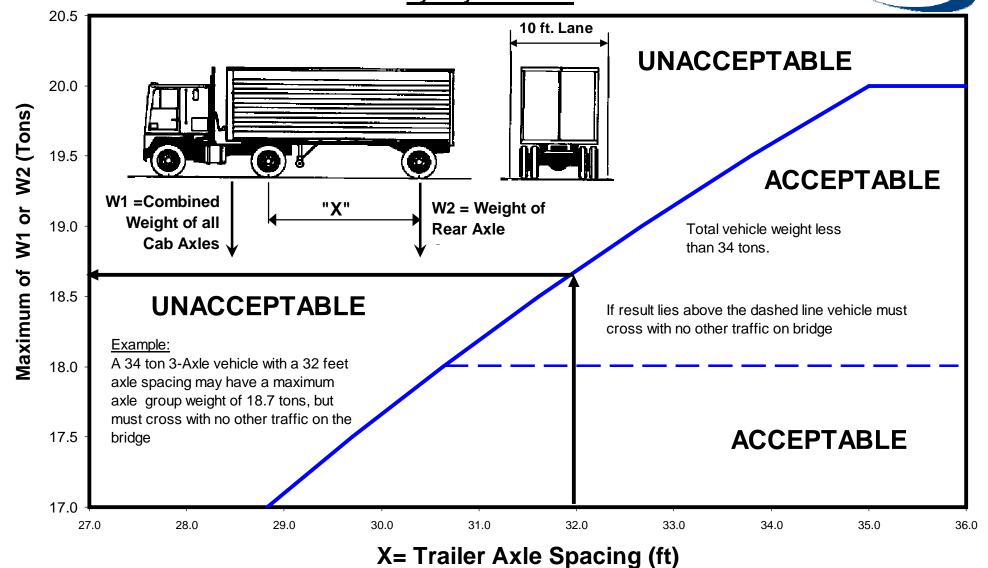




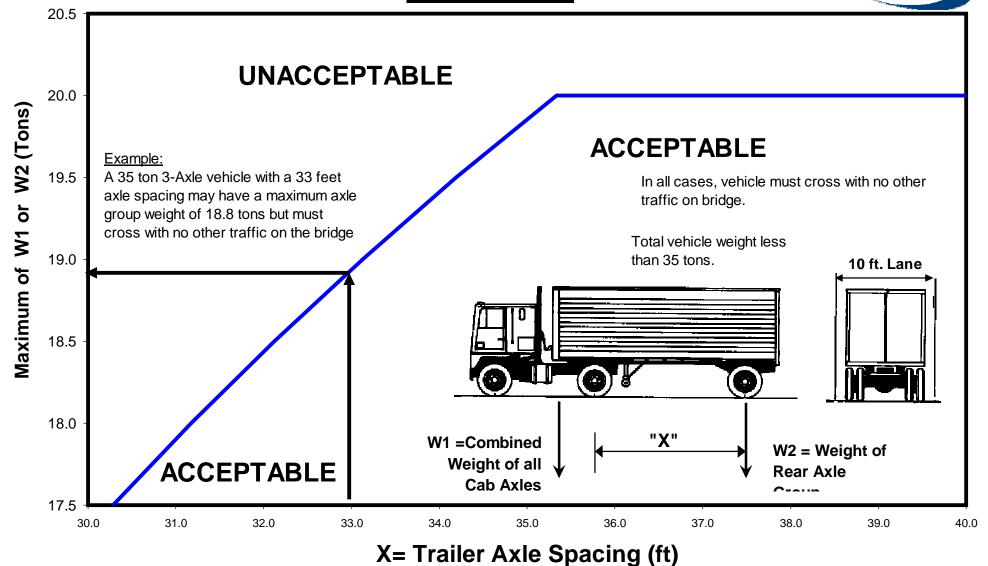

Wilbur Smith Associates


ENGINEERS

PLANNERS **ECONOMIST**

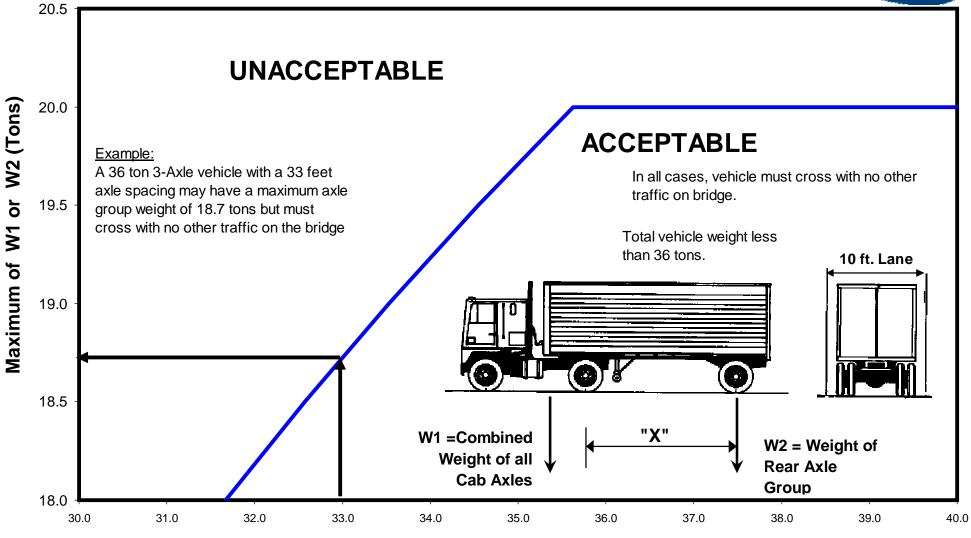


X= Trailer Axle Spacing (ft)



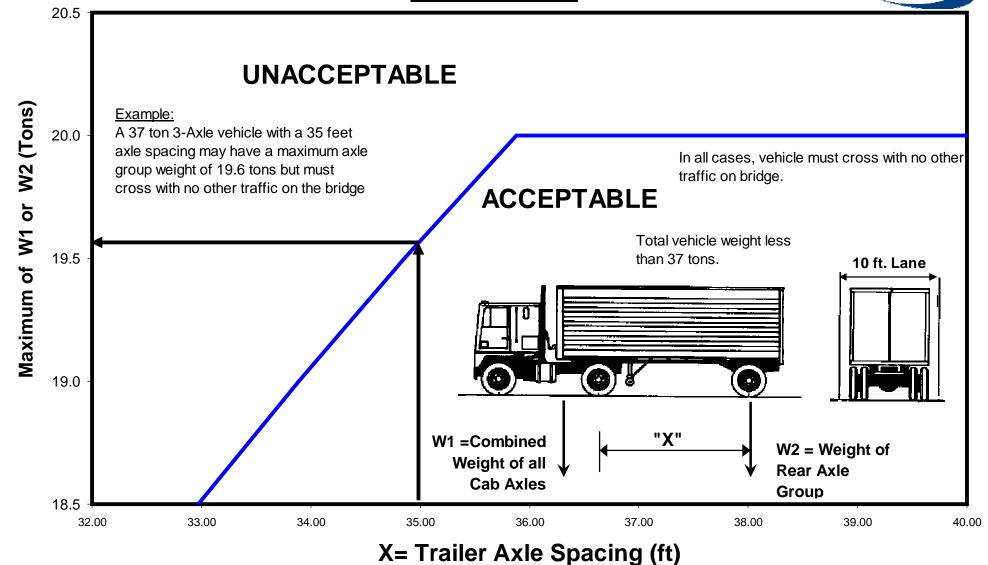


38 Ton Vehicle Weight - 3 Axle By: Taylor 11/10/04



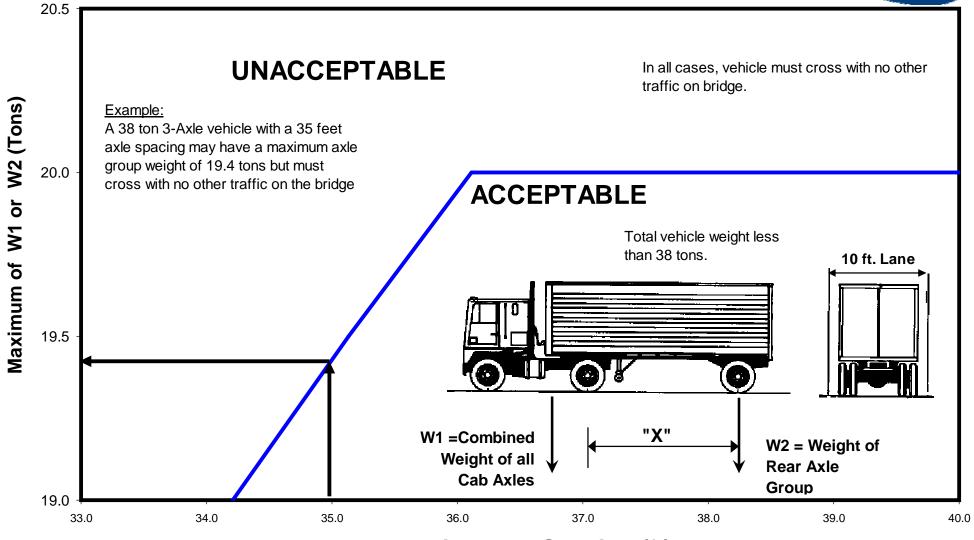

39 Ton Vehicle Weight - 3 Axle By: Taylor 11/10/04




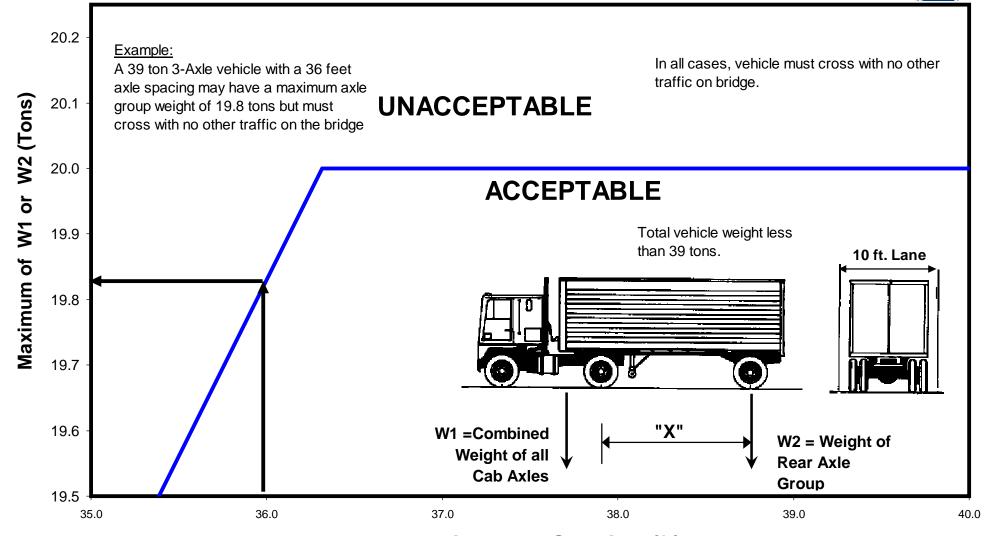








Bridge Consultant

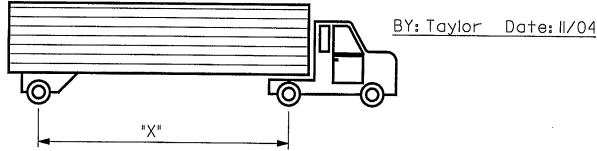

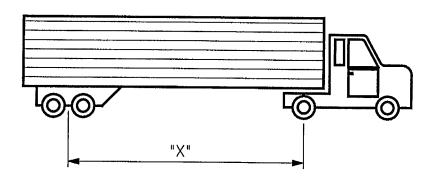

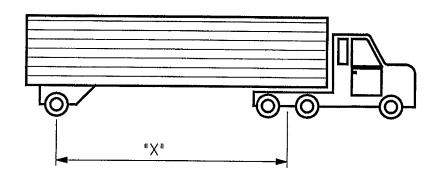

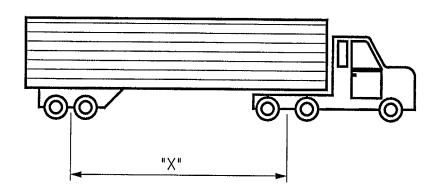

Measurement of Dimension "X"